

# Wiring example

## Driver Frame Type Symbol (Frame A, B, C, D)

For details, refer to the Instruction Manual.

### • Wiring of main circuit

#### Circuit Breaker (NFB)

Protects the power lines.  
Shuts off the circuit when overcurrent passes.

#### Noise Filter (NF)

Prevents external noise from the power lines.  
And reduces an effect of the noise generated by the servo driver.

#### Magnetic Contactor (MC)

Turns on/off the main power of the servo driver.  
Surge absorber to be used together with this.


#### Reactor (L)

Reduces harmonic current of the main power.

#### Pin RB, RB2 and RB3 ...

- RB2 and RB3 to be kept shorted for normal operation.
- When the internal regenerative resistor capacity has shortage, disconnect between RB2 and RB3, then connect an external regenerative resistor between RB1 and RB2.

Motor	to page A4-49
Driver	to page A4-39
Option	to page A4-113
Recommended equipments	
Parts customer to prepare	

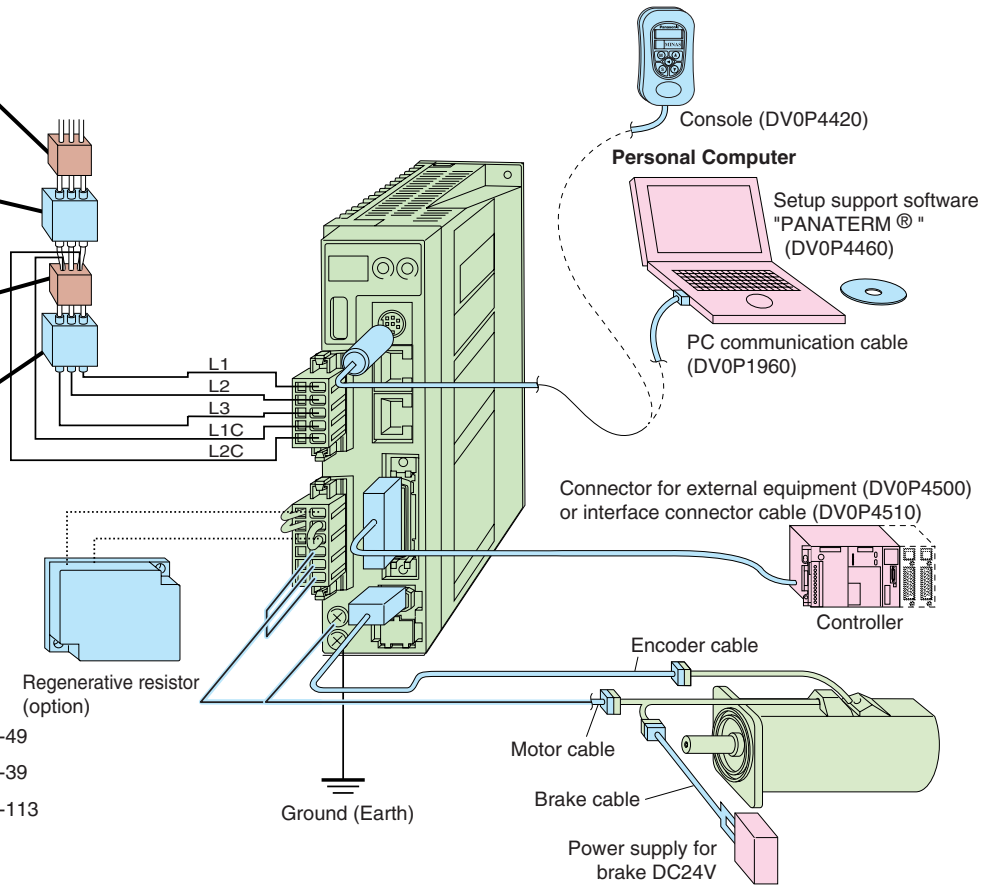

### • List of recommended peripheral equipments

Power supply voltage	Applicable motor Series	Out put	Power capacity (at rated load)	Circuit breaker (rated current)	Noise filter	Surge absorber	Noise filter (signal)	Magnetic contactor (Contact)	Cable diameter (Main circuit)	Cable diameter (control circuit)	Connector
Single phase, 100V	MSMD	50W	Approx. 0.4kVA	BBW 2102 (10A)	DV0P 4170	DV0P 4190	DV0P 1460	BMFT61041N (3P+1a)	0.75mm <sup>2</sup> to 2.0mm <sup>2</sup> AWG14 to 18	0.75mm <sup>2</sup> AWG18	Connection to exclusive connector
	MSMD	100W	Approx. 0.5kVA					BMFT61541N (3P+1a)			
	MQMA	200W	Approx. 0.5kVA					DV0P 4180			
	MQMA	400W	Approx. 0.9kVA								
Single phase, 200V	MSMD	50W	Approx. 0.5kVA	BBW 2102 (10A)	DV0P 4170	DV0P 4190	DV0P 1460	BMFT61542N (3P+1a)	0.75mm <sup>2</sup> to 2.0mm <sup>2</sup> AWG14 to 18	0.75mm <sup>2</sup> AWG18	Connection to exclusive connector
	MSMD	100W	Approx. 0.5kVA								
	MAMA	100W	Approx. 0.3kVA								
	MQMA	100W	Approx. 0.3kVA								
	MAMA	200W	Approx. 0.5kVA								
	MSMD	200W	Approx. 0.5kVA								
	MQMA	200W	Approx. 0.5kVA								
	MSMD	400W	Approx. 0.9kVA								

Power supply voltage	Applicable motor Series	Out put	Power capacity (at rated load)	Circuit breaker (rated current)	Noise filter	Surge absorber	Noise filter (signal)	Magnetic contactor (Contact)	Cable diameter (Main circuit)	Cable diameter (control circuit)	Connector
Single/ 3-phase, 200V	MAMA	400W	Approx. 0.9kVA	BBW 3152 (15A)	DV0P 4180	DV0P 1450	DV0P 1460	BMFT61542N (3P+1a)	0.75mm <sup>2</sup> to 2.0mm <sup>2</sup> AWG14 to 18	0.75mm <sup>2</sup> AWG18	Connection to exclusive connector
	MFMA	400W	Approx. 0.9kVA								
	MHMA	500W	Approx. 1.1kVA								
	MSMD	750W	Approx. 1.3kVA								
	MAMA	750W	Approx. 1.6kVA								
	MDMA	1.0kW	Approx. 1.8kVA								
	MHMA	1.0kW	Approx. 1.8kVA								
	MGMA	900W	Approx. 1.8kVA								
	MSMA	1.0kW	Approx. 1.8kVA								
	MSMA	1.0kW	Approx. 1.8kVA								
	MDMA	1.5kW	Approx. 2.3kVA								
	MFMA	1.5kW	Approx. 2.3kVA								
	MHMA	1.5kW	Approx. 2.3kVA								

• Select a single and 3-phase common specifications corresponding to the power supplies.

• Listed circuit breaker and magnetic contactor are manufactured by Matsushita Electric Works.

**To conform to EC Directives, install a circuit breaker which conforms to IEC and UL Standards (Listed, ® marked) between noise filter and power supply without fail.**

• For details of noise filter, refer to Page A4-110.

#### <Remarks>

- Select a circuit breaker and noise filter which match to the capacity of power supply (including a load condition).
- Terminal block and earth terminals  
Use a copper conductor cables with temperature rating of 60°C or higher.  
Earth terminals for Frame A to D are M4 and M5 for Frame E to F.  
Larger tightening torque for screws than the max. value (M4 : 1.2 N·m, M5 : 2.0 N·m) may damage the terminal block.
- Use an earth cable with the same diameter as that of the main circuit cable.  
If the diameter of the main circuit cable is 1.6mm<sup>2</sup> or less, use an earth cable with a diameter of 1.6mm<sup>2</sup> (AWG14).
- Use the attached exclusive connector for A to D-frame, and maintain the peeled off length of 8-9mm.
- Tighten the screws of the connector, CN X5 for the host controller with the torque of 0.3 to 0.35 N·m.
- Larger torque than 0.35N·m may damage the connector at the driver side.

## Driver Frame Type Symbol (Frame E, F)

For details, refer to the Instruction Manual.

### • Wiring of main circuit

**Circuit Breaker (NFB)**  
Protects the power lines.  
Shuts off the circuit when overcurrent passes.

**Noise Filter (NF)**  
Prevents external noise from the power lines.  
And reduces an effect of the noise generated by the servo driver.

**Magnetic Contactor (MC)**  
Turns on/off the main power of the servo driver.  
Surge absorber to be used together with this.

**Reactor (L)**  
Reduces harmonic current of the main power.

#### Pin P, B1 and B2 ...

- B1 and B2 to be kept shorted for normal operation.
- When the internal regenerative resistor capacity has shortage, disconnect between B1 and B2, then connect an external regenerative resistor between P and B2.

Regenerative resistor (option)

Ground (Earth)

Motor	to page A4-49
Driver	to page A4-39
Option	to page A4-113
Recommended equipments	
Parts customer to prepare	

### • List of recommended peripheral equipments

Power supply voltage	Applicable motor Series	Out put	Power capacity (rated load)	Circuit breaker (rated current)	Noise filter	Surge absorber	Noise filter (signal)	Magnetic contactor (Contact)	Cable diameter (Main circuit)	Cable diameter (control circuit)	Connector
3-phase, 200V	MSMA	2.0kW	Approx. 3.3kVA	BBW 3302 (30A)	DV0P 4220			BMF6352N (3P+2a2b)	2.0mm <sup>2</sup> AWG14	0.75mm <sup>2</sup> AWG18	Connection to terminal block M5
	MDMA										
	MHMA										
	MFMA	2.5kW	Approx. 3.8kVA								
	MGMA										
	MSMA										
	MDMA	3.0kW	Approx. 4.5kVA			DV0P 1450	DV0P 1460				
	MHMA										
	MGMA										
	MSMA	4.0kW	Approx. 6.0kVA	BBW 350S (50A)	DV0P 3410						
	MDMA										
	MHMA										
MFMA	4.5kW	Approx. 6.8kVA									
MGMA											
MSMA											
MDMA	5.0kW	Approx. 7.5kVA									
MHMA											


- Select a single and 3-phase common specifications corresponding to the power supplies.
- Listed circuit breaker and magnetic contactor are manufactured by Matsushita Electric Works.

**To conform to EC Directives, install a circuit breaker which conforms to IEC and UL Standards (Listed, Ⓢ marked) between noise filter and power supply without fail.**

- For details of noise filter, refer to Page A4-110.

#### <Remarks>

- Select a circuit breaker and noise filter which match to the capacity of power supply (including a load condition).
- Terminal block and earth terminals  
Use a copper conductor cables with temperature rating of 60°C or higher.  
Earth terminals for Frame A to D are M4 and M5 for Frame E to F.  
Larger tightening torque for screws than the max.value (M4 : 1.2 N·m, M5 : 2.0 N·m) may damage the terminal block.
- Use an earth cable with the same diameter as that of the main circuit cable.  
If the diameter of the main circuit cable is 1.6mm<sup>2</sup> or less, use an earth cable with a diameter of 1.6mm<sup>2</sup> (AWG14).
- Use the attached exclusive connector for Frame A to D and maintain the peeled off length of 8-9mm.
- Tighten the screws of the connector, CN X5 for the host controller with the torque of 0.3 to 0.35 N·m.
- Larger torque than 0.35N·m may damage the connector at the driver side.

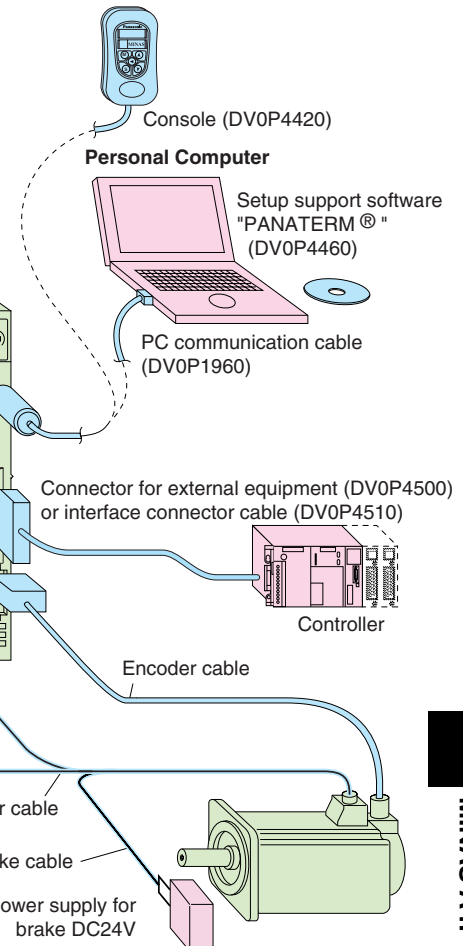

MINAS A4P Wiring example